

## Black-Iron Patch

### Patches

Black-Iron Patch easily installs using standard drywall compounds and corrects cutouts that were made too large. Black-Iron Patch will not fuzz-up during sanding.

- Pre-cut to fit standard sprinkler pipes
- Repairs and reinforces mis-cut or damaged areas around sprinkler pipe holes
- Install in areas where patching cutouts were made too large
- Sprinkler pipe relocation

### Product Data & Ordering Information

Product Code	Width	Hole Size	Wholesale Case Pcs/Case Pack	Wholesale Case Cases/Pallet
BP-100	4-1/2" dia.	1-3/8"	5 bags of 20	24

### ASTM & Code Standards

- ASTM C1047 - Standard Specification for Accessories for Gypsum Wallboard
- SDS & Product Certification Information is available at [www.clarkdietrich.com/SupportDocs](http://www.clarkdietrich.com/SupportDocs)


### Installation:

- To apply, lightly sand area to be repaired.
- Apply drywall compound 1/8"-1/4" thick directly to back of patch.
- Place patch over center of repair and wipe down flat to wall using joint knife.
- Immediately skim-coat patch and let dry.
- Apply second coat, let dry, and sand. Compound that remains on backside of Black-Iron Patch makes patch very rigid in the damaged area.

### Storage

All stored materials shall be kept dry. Materials shall be stacked off the ground, supported on a level platform, and protected from weather and moisture.

## 09.22.00 (Support for Plaster & Gypsum Board)

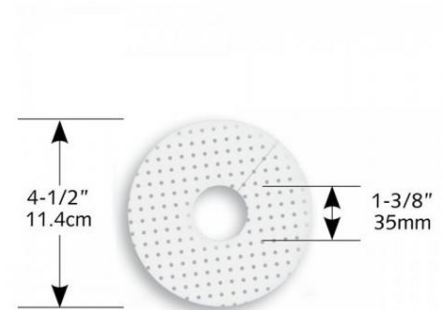

### Project Information

Name:  
Address:

### Contractor Information

Name:  
Contact:  
Phone:  
Fax:

### Architect Information

Name:  
Contact:  
Phone:  
Fax: