

Strait-Flex® Butt-Tape

Premium Trims and Tapes

Butt-Tape is twice as fast as conventional tapes and two times stronger than paper or mesh tape. No compound required over laminated area of tape - just skim coat edges. Apprentices and professional tapers can achieve the flattest butt-joints possible. Leaves butt-joints virtually non-noticeable.

- Vertical and horizontal butt-joints
- Commercial "Top-Out" applications
- 50% less compound. 50% less sanding. 50% faster drying time.
- Cracked butt-joints and stress cracks
- No pre-filling required, no delayed shrinkage
- No beading or paint blisters

Product Data & Ordering Information

Product Code	Width	Length	Wholesale Case Rolls/Case Pack	Wholesale Case Cases/Pallet
BT-100	2-1/16"	100'	12	24
BT-200	2-1/16"	200'	12	24

ASTM & Code Standards

- ASTM C1047 - Standard Specification for Accessories for Gypsum Wallboard
- SDS & Product Certification Information is available at www.clarkdietrich.com/SupportDocs


Installation:

- Apply all-purpose joint compound to butt-joint with a 5" or 6" taping knife. Press Butt-Tape into wet compound by hand. Adjust center line of tape to center over joint.
- Wipe down edges. Immediately apply a coat of compound with an 8" or 10" taping knife to each edge of Butt-Tape. Let dry.
- Apply second coat with 10" or 12" taping knife to each edge of Butt-Tape. Let dry and sand.


Storage

All stored materials shall be kept dry. Materials shall be stacked off the ground, supported on a level platform, and protected from weather and moisture.

09.22.00 (Support for Plaster & Gypsum Board)

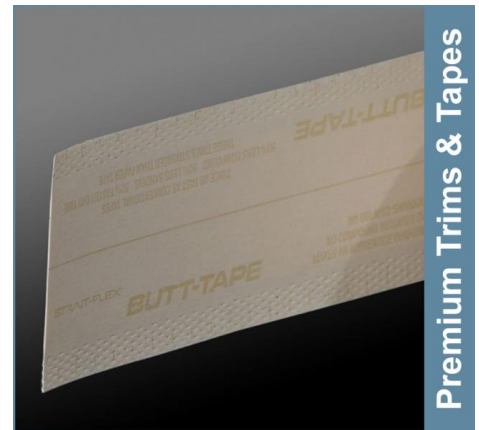

Premium Trims & Tapes

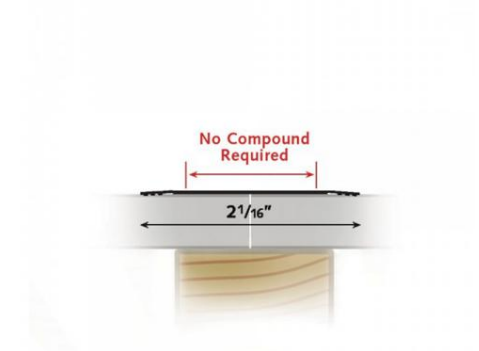

Project Information

Name:
Address:

Contractor Information

Name:
Contact:
Phone:
Fax:

Architect Information

Name:
Contact:
Phone:
Fax: